

# Oven & Grill Cleaner

A heavy-duty formulation that works on grease, caked-on foods and other cooking soils. For daytime application or overnight cleaning. This formula penetrates, emulsifies and holds the soils so you can wipe the surface clean with water.

- **CLEANS:**

- Caked Foods
- Grease
- Other Foods
- Works in Minutes or Overnight

## Technical Specifications

|                |               |
|----------------|---------------|
| Dilution Rate  | RTU           |
| Color          | Blue gel      |
| Scent          | Alkali        |
| pH @ 25 deg. C | 13.00 - 14.00 |



## Safety

See material safety data sheet and product for safety information, handling and proper use.

## Availability

HIL0103855

12 - 18 oz. Cans

## Certifications, Registrations & Notes

NSF Registered

## Directions

This effective cleaner is safe to use on porcelain, glass, ceramics, stainless steel, and cast iron surfaces. Keep spray or drippings away from the pilot lights, electrical connections, switches, receptacles, thermostats, heating elements, light bulbs, and other surfaces which might be affected by caustics. Avoid contact with painted or varnished surfaces, clothing, floor tile, linoleum, plastics, chrome, copper, aluminum, and coppertone surfaces. Not for use on self-cleaning or continuous cleaning ovens. Place newspaper under oven door to protect floor. Wear rubber gloves to avoid skin contact.

1. Use on empty oven, either cold or pre-heated to 200°F and turned off. TURN OFF PILOT LIGHT and/or ELECTRIC SWITCH.
2. Hold can upright and point spray button away from face. SHAKE WELL, then spray inside of oven from a distance of 8 to 12 inches, giving it an even coating.
3. Spray top and bottom of oven first; then spray remaining oven surfaces and allow to stand about 30 minutes. (May be left on overnight with oven door closed.)
4. Wipe oven clean with damp cloth, sponge, or paper towel. Spots that are difficult to remove should be retreated and cleaned with a scouring pad. Rinse with potable water.
5. When clean, re-ignite pilot light, or turn on electric switch, and heat oven to 400°F for 10 minutes before using with food again.

